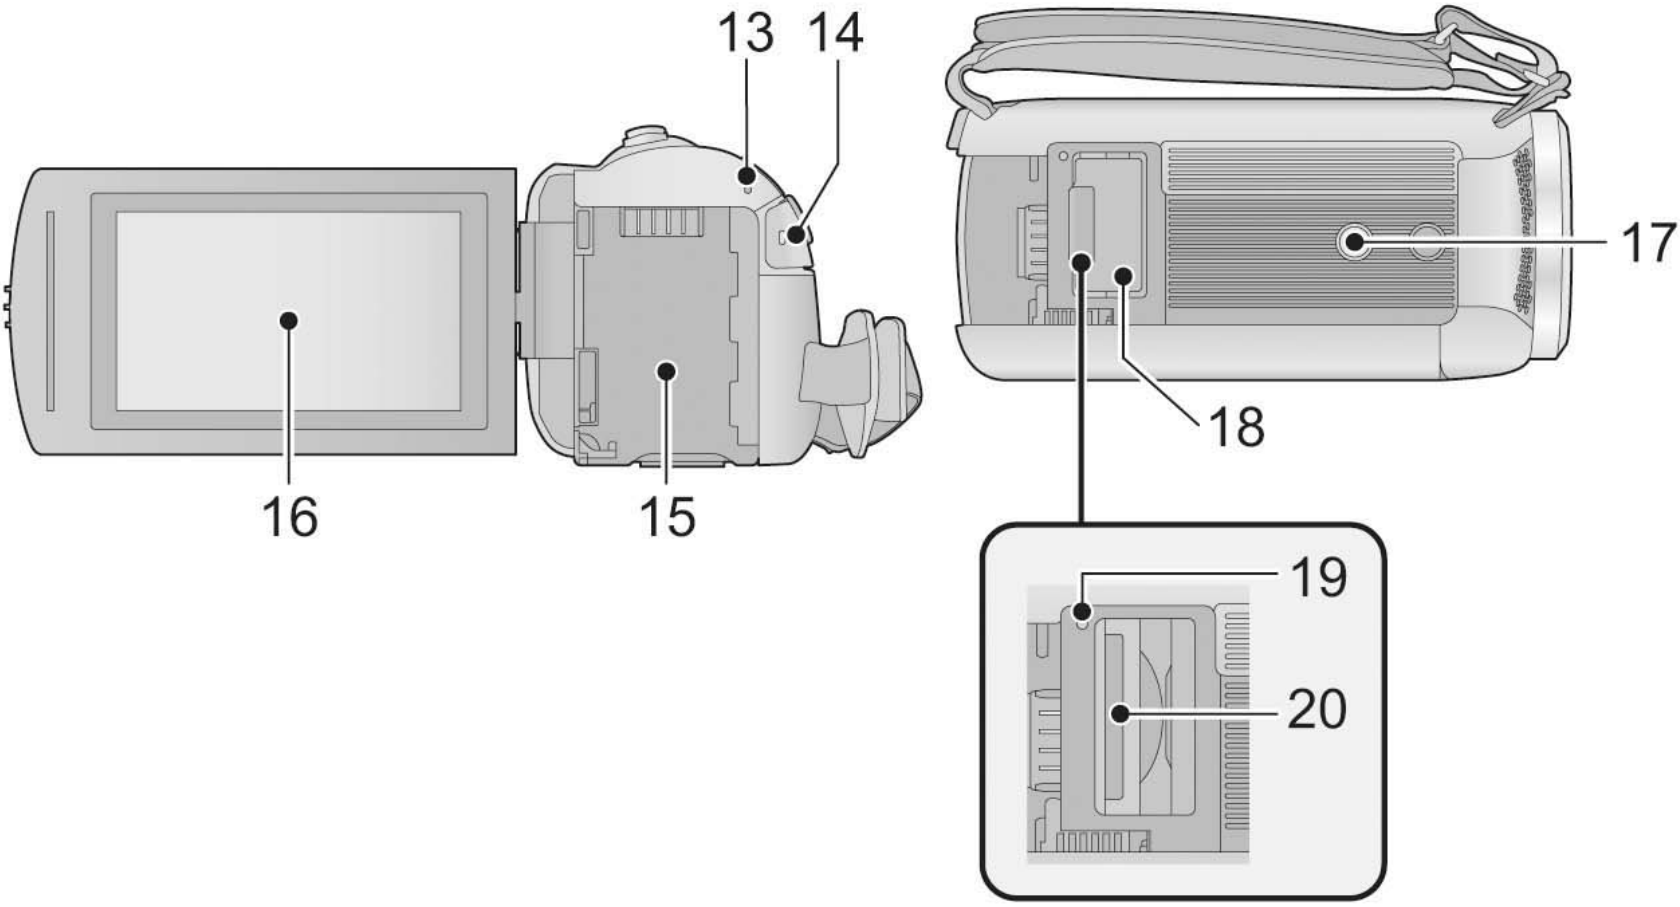

13 Status indicator (➜ 15, 142)
14 Recording start/stop button (➜ 21)
15 Battery holder (➜ 10)
16 LCD monitor (Touch screen) (➜ 17)

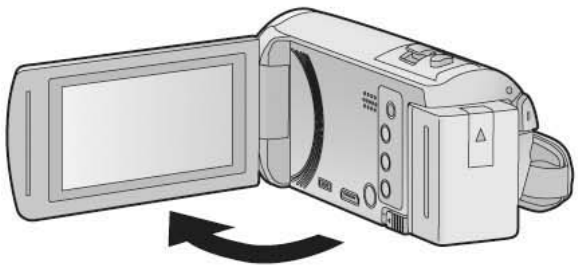

- It can open up to 90°.

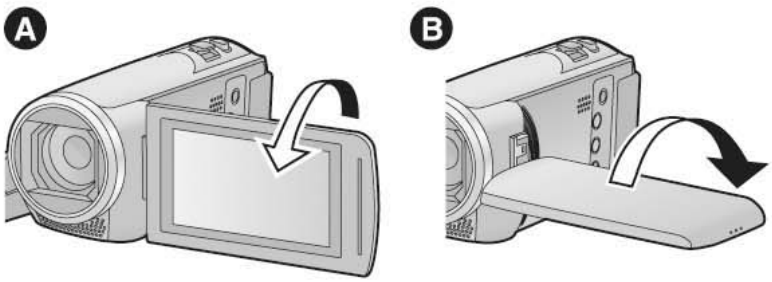

- It can rotate up to 180° Ⓐ towards the lens or 90° Ⓑ towards the opposite direction.

17 Tripod receptacle
- Attaching a tripod with a screw length of 5.5 mm (0.22 ″) or more may damage the unit.

18 SD card cover (➜ 14)
19 Access lamp [ACCESS] (➜ 14)
20 Card slot (➜ 14)